

**Educational Technology Support
Classroom Equipment**

Classroom Projector

To switch inputs press the Input button on the remote to bring up the menu. Pressing Input again will toggle to the next available input. Repeat until you are on the desired input. On some remotes, press **Video** for the VCR/DVD or **Computer/RGB** for the PC.

Input Options:

Input Device	Projector Input Selection use the remote control
Computer	PC input
VCR/DVD	Video input

Connecting a Laptop to the Projector



To connect a laptop to the projector use the AUX VGA cable and refer to the table below. If you do not have any video displaying and the projector is on RGB1 compare the lights on the ATEN Video Matrix switch to the table:



Video Source/Output	Video Matrix settings
Computer	Buttons 1 and 2 are green
AUX VGA	Buttons 1 and 2 are amber

The audio from both the computer and VCR/DVD player will play through the speakers regardless of the projector's input.

If you have trouble with the wireless keyboard and mouse they may need to be reconnected to the receiver. Press the Connect button on the keyboard or mouse, then press the Connect button on the receiver.

Call the IT Helpdesk at 398-2106 for assistance.